

GEBRUIKSAANWIJZING BETERGRIP© ANTISLIP



BGRIP20200512



1. Reinigen

Reinig de ondergrond zorgvuldig met water en maak het vervolgens goed droog.

2. Ontvetten

Neem het doekje en de ontvetter uit de verpakking en ontvet daarmee de ondergrond. Droog daarna de ondergrond m.b.v. een schone doek of keukenpapier.

3. Afplakken

Met het meegeleverde afplaktape kunt u nu het aan te brengen oppervlak afplakken. Dit kan op verschillende manieren. Onderaan de gebruiksaanwijzing vindt u enkele voorbeelden.

4. Mengen

Pak nu het meegeleverde potje (comp. 1) en het bruine flesje (comp. 2). Open het potje en schenk het bruine flesje leeg in het blikje. Roer vervolgens alles 1 minuut heel goed door elkaar met het meegeleverde houten roerstaafje.

5. Aanbrengen




Giet het mengsel in het meegeleverde verfbakje en breng het m.b.v. het meegeleverde verf-rollertje de antislip gelijkmatig aan op het oppervlak (punt 3)

6. Klaar!

Verwijder tot slot het afplaktape en laat alles minimaal 24 uur drogen. Na 24 uur is het oppervlak weer te gebruiken.

De ruimte dient goed geventileerd te worden!

Voorbeelden oppervlak afplakken

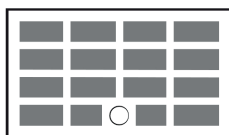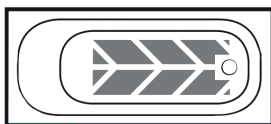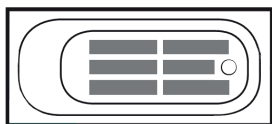

USERMANUAL BETERGRIP®



BGRIP20200506



1. **Cleaning**

Clean the surface thoroughly with water and wipe it dry properly.

2. **Decreasing**

Remove the cloth and degreaser from the packaging and degreases the surface. Then dry the substrate using a clean cloth or paper towel.

3. **Masking**

With the included adhesive tape, you can now masking the surface. This can be done in different ways. Down the manual you will find some examples.

4. **Mix**

Now take the included can (comp. 1) and the brown bottle (comp. 2). Open the can and empty the brown bottle into the can. Then use the enclosed wooden stick to stir for 1 minute very well with the components.

5. **Application**

Put the mixture into the paint tray and apply it with the supplied paint roller evenly on the surface (point 3)

6. **Ready!**

Finally, remove the adhesive tape and let it dry for at least 24 hours. After 24 hours, the surface is ready to be used again.

The room should be well ventilated!

Examples of masking

